

PUMP START VOLTAGE CALIBRATION INSTRUCTION

How configurate a new Ecu to your old Pump

Disconnect a KERO Main TUBE (festo Blue) → put the tubes in a glass to assess quantity of kerosene filling out

TEST MENU 5 → V

5.1 PUMP TEST MENU → V

Use arrows   to Set Value from 0.16 to 0.20

NOW if you PUSH {
V fuel pump start at the Setting Value and you can check the quantity of kerosene
X to stop the pump

NOW adjust the value to find a best quantity (continuously drips) **NORMALY BETWEEN 0.16<0.20**

IMPORTANT: THIS VALUE MUST BE INSERT TO SETUP 1.4 (PUMP START VOLTAGE) and confirm V

This procedure is very important because models have a different type of Tanks, short and longs fuel line that can be change influence this value.