


## PTS4


## Self-adjusting wire stripper and cutter

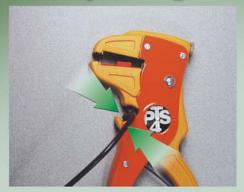

Place cable between cutter blades and close handles fully



Clamp prepared cable between front blades, against the cablestop, for the lenght to be stripped, using as reference millimeter scales laterally positioned.

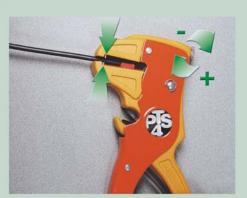

Press on handles; cables il locked by external jaws while the insulation is lightly cut without damaging the conductor.

For external sheaths of three-core cables, change blade pressure using the adjustment.



The complete closing of the handles operates a sliding action of the blades that removes the insulation.



Via Vizzano 44 - 40037 Pontecchio Marconi (Bologna )Italy Tel. +39 051 6782006 Fax +39 051 845544 E-mail: sales@elcontrol-energy.ne.t